

TECHNICAL DATA SHEET

1. TRADE NAME: **KIT MELATRAP + VESPOKIL**

Monitoring device to detect the presence of wasps, hornets, and fruit flies.

Monitoring device to be used to maintain regular surveillance of pests in a domestic setting for a defined period of time.

2. PRODUCT CODE: **P-04025INKIT**

3. PICTURES:



4. TECHNICAL SPECIFICATIONS:

The kit is composed of Melatrap (polyethylene trap) and Vespokil (food attractant based on water, sugar, ethyl alcohol, apple vinegar, sodium glutamate, flavours, E122 dye).

Melatrap Measures: 180 (diameter) x 140 (h) mm

Vespokil Measures: 70 x 170 (h) mm; bottle of 500 ml

Colour: as in the picture

InVerde products could undergo necessary or opportune technical changes, at any given time, without prior written notice to customers.


5. HOW TO USE:

Pour 250 ml of Vespokil (half bottle) inside Melatrap and dilute with 250 ml of water (1:1 dilution). We suggest the use of gloves every time the liquid is handled.

Place the trap outdoors, at 1,5 m height to be easily controllable, protected from the sun (for example, under the trees) and put it in the air flow.

The vespids (wasps and hornets), fruit flies (drosophila) and flies are attracted by the special odour coming from the trap once the liquid has been poured.

TECHNICAL DATA SHEET

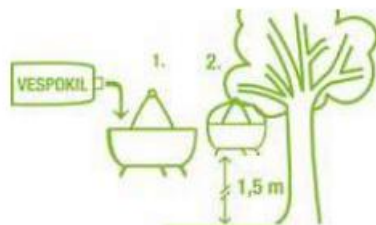

Place Melatrap activated with Vespokil in the following places: terraces, roofs, orchards, gardens.

Suggested monitoring period: from February to October, according to the season temperature.

Suggested frequency of the controls: Control the trap every 7 days to check the quantity of caught insects. In case the trap is full of insects or dry (evaporated liquid), or after 2 weeks, change the liquid.

Storage conditions: in a cool and dry room, temperature below 25°C and R.H. below 55%.
If well stored (intact packaging), the product shelf life is 3 years.

6. PACKAGING AND SPARE PARTS:

Packaging:

- Kit Melatrap+Vespokil (P-04025INKIT): 1 Melatrap+ 1 Vespokil (500 ml bottle)

Spare parts (sold separately):

- Melatrap (P-04025IN)
- Kit Melatrap+Vespokil (P-04025INKIT): 1 Melatrap+ 1 bottle Vespokil

7. DISPOSAL CONSIDERATIONS:

Waste disposal should be in accordance with existing Community, National and local regulations.